
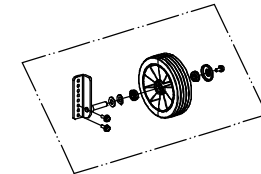
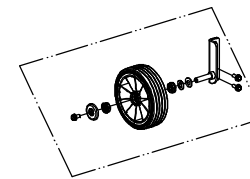
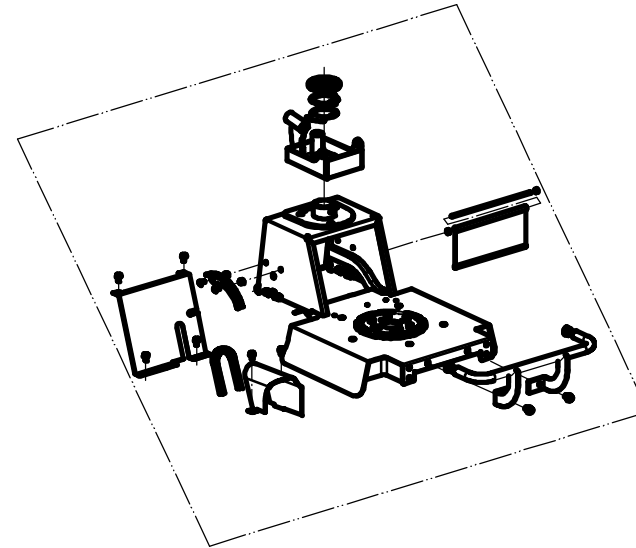
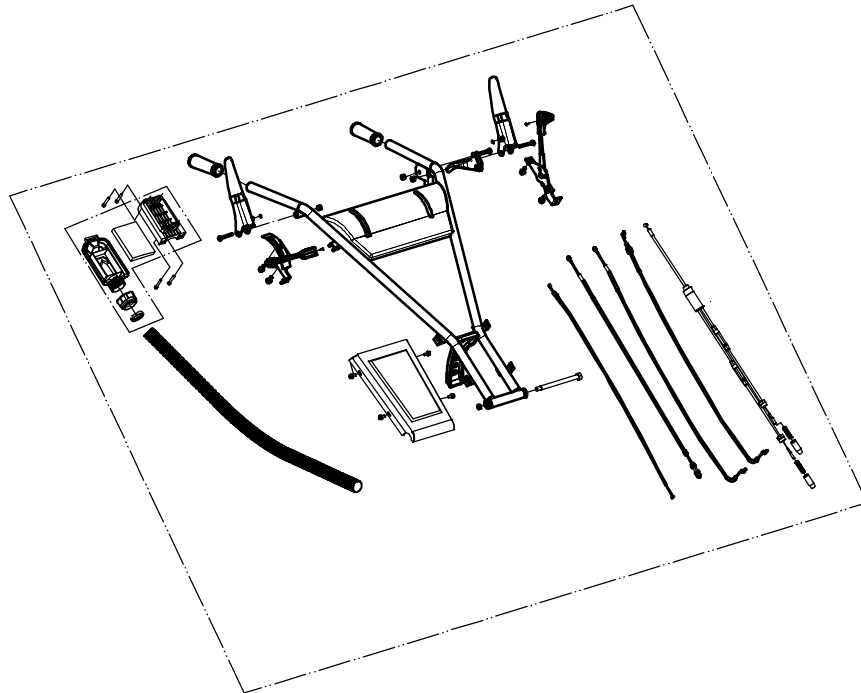
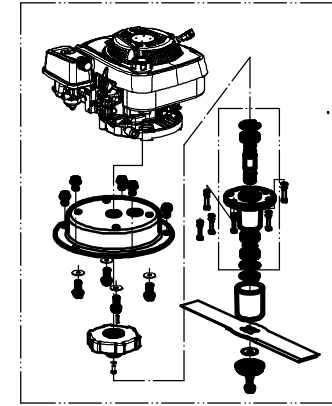


Model:WBBC537SCV
Service code: WBC537VC020B2211

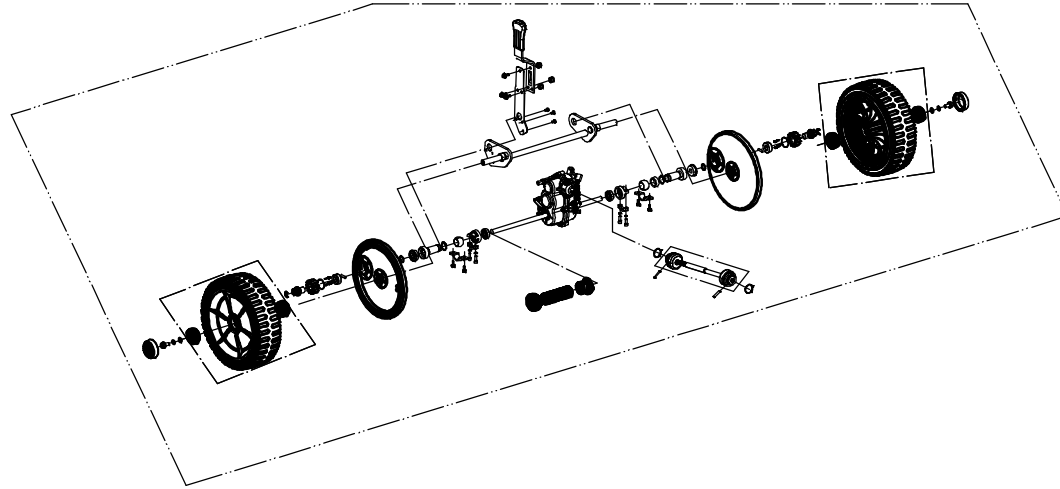

WBBC537SCV Spare Parts List Service Code: WBC537VC020B2211

Subassembly code	Name_Chinese	Name_English	Machine Breakdown	Parts List
1	1P70FA-K8142	Engine		
2	WBBC537SCV	Blade system	2.pdf	Blade Components
3	WBBC537SCV	Main body	3.pdf	Main Body
4	WBBC537SCV	Handle and controls	4.pdf	Front Axle
5	WBBC537SCV	Rear Axle	5.pdf	Rear Axle
6	WBBC537SCV	Right-front wheel	6.pdf	Handle And Controls
7	WBBC537SCV	Left-front wheel	7.pdf	Grass Catcher

2	Part2 Blade system Spare Parts		
Order	Part Number	Name_English	Quantity
1	0102010020	Bolt - M10*20	5
2	BC45TB01000/49	Engine seat	1
3	0302010000	Big washer - M10	6
4	48R0162413	Bolt - 5/16*24*25	4
5	1102005018□	Key - 5*5*18	1
6	BC53AB01000□	Clutch	1
7	0401008000	Circlip - M8	8
8	0101008020□	Bolt - M8*20	1
9	BC53AB02000□	Blade shaft component	1
10	6005-2RS	Bearing 6005-2RS	3
11	BC53AB03000□	Blade shaft	1
12	BC53AB05000/22□	Bearing seat	1
13	BC45BB07000B1/02□	Spacer for blade shaft bearing	1
14	0901047000□	Circlip - M47	2
15	BC53AB06000□	Adapter	1
16	BC53AB07000/01□	Grass proof of protective sleeve	1
17	BC53AB04000/01□	Blade	1
18	BC53AB08000	Belleville spring	1
19	0202010000□	Nylon lock nut - M10	2
20	0301008000□	Flat washer - M8	6
21	0101008030	Bolt - M8*30	6
22	BC45TB09000/22□	Swing blade	2
23	BC45TB10000/02□	Spacer bush for swing blade	2
24	0101010035□	Blade - M10*35	2
25	0102010030/10P9	Central bolt M10X1,25X30	1


3	Part3 Main Body Spare Parts List		
Order	Part Number	Name_English	Quantity
1	0219060000	Circle nut - M60	1
2	0304060000	Tab washer for circle nut	1
3	BC53AC01000/49	Limit washer	1
4	BC45TC02000/49	Rotating base	1
5	BC53AC02000/49	Chassis	1
6	GM46A000000060/02	Rear tail axle	1
7	0202006000	Nylon lock nut - M6	10
8	BC53AC04000	Rear deflector	1
9	BC45TC10000	Dust guard	1
10	4820104010	Screw - M6*12	6
11	BC53AC05000/22	Drive shaft shield	1
12	BC53AC06000/40	Bumper	1
13	0102008020	Bolt - M8*20	4
14	BC53AC07000/49	Front baffle	1
15	0104006016	Screw - M6*16	2
16	BC45TC14000B1/22	Indexing plate	1
17	BC45BC11000	Plug for bumper	2
18	BC53AC08000/49	Rear guardrail	1
19	0104006020	Bolt - M6*20	4
20	BC53AC09000/49	Front shield	1
21	BC53AC10000/49	Front baffle for chassis	1
22	BC53AC11000/02	Front shaft for baffle	1
23	5360122010C	Rubber Ring	1

4	Part4 Handle and controls Spare Parts List		
Order	Part Number	Name_English	Quantity
1	BC53AD01000/49□	Handle	1
2	45A0323010□	Big hande sheath	2
3	BC53AD02000/01□	Drive handle	1
4	1301005000	Criclip - M5	2
5	0104006045□	Screw - M6*45	2
6	0202006000□	Nylon lock nut - M6	3
7	0104006025□	Screw - M6*25	1
8	BC45TD02000/01□	Rotating plate for handle	1
9	BC53AD03000/49□	Brake handle	1
10	BC45TD11000	Speed control bracket	1
11	0102006016	Bolt - M6*16	4
12	5380508010□	Speed control grip	1
13	0106003013	Screw - ST2.9*13	2
14	5380510010□	Throttle grip	1
15	BC53AD04000	Throttle bracket	1
16	BC45TD13000/49□	Shield	1
17	0102006012	Bolt - M6*12	4
18	0202012000□	Nylon lock nut - M12	1
19	BC45TD12000/02□	Step bolt	1
20	YM98-1010-A1□	Throttle cable	1
21	BC53AD05000	Clutch cable	1
22	BC53AD06000□	Brake cable	1
23	BC45TD17000	Speed control cable	1
24	BC45TD16000□	Height and angle adjustment cable	1
25	BC45TD21000/02□	Spring	2
26	BC45TD22000/02□	Cable core	2


5	Part5 Rear axle Spare Parts List		
Order	Part Number	Name_English	Quantity
1	BC45TE01000	Wheel cap	2
2	0102008016	Bolt - M8*16	2
3	0401008000□	Spring washer - M8	2
4	0301008000	Flat washer - M8	2
5	BC45TE02000C2□	Polyurethane wheel	2
6	1301009000□	Circilp - M9	2
7	5020311010A1/04□	Anti-friction washer□	2
8	5320326010P□	Plastic bearing□	2
9	HQ000100010	Left drive pinion□	1
10	1401025015□	O-sealing ring□	2
11	HQ000100030	One-way telescopic pin□	6
12	HQ000100040	spring for One-way telescopic pin□	6
13	HQ000100050	One-way seat□	2
14	HQ000100060	Pin for one-way seat□	2
15	BC45TE03000C3	Dust cover□	2
16	1001012000	Circilp - M12	2
17	5310213010	Bearing	2
18	5320324021/02□	Left bearing seat□	1
19	1001020000	Circilp - M20	2
20	BC45BE02000B1/02□	Spacer bush for transmission	1
21	5320328010	Bearing	2
22	5320324022	Bearing base	2
23	R8-2RS	Bearing	2
24	5320114020/02	Upper bearing base□	2
25	0102006012□	Bolt - M6*12	4
26	5320324023	Cap for bearing base	2
27	0302005000	Spring washer - M5	4
28	0123005020	Screw - M5*20	4
29	BC53AE01000□	Transmission assembly	1
30	HQ000100020	Right drive pinion□	1
31	5320325021/02	Right bearing sleeve□	1
32	HQA02000002	Check ring□	2
33	BC45TE05000□	Universal drive shaft	1
34	HQA020000090	Pin□	2
35	BC53AE03000/01□	Rear axle	1
36	BC45BD11000B1/01□	leaf spring for regulating handle	1
37	0104006014□	Screw - M6*14	3
38	5360310020/40□	Regulating handle lever	1
39	0202006000	Nylon lock nut - M6	3
40	0104005008	Screw - M5*8	3
41	BC45TE07000	Transmission end cover□	1
42	BC53AE04000	Corrugated pipe□	1
43	BC45TE09000	Bearing seat cover□	1
44	140101200P6	O-sealing ring□	2

6	Part6 Right-front wheel Spare Parts List		
Order	Part Number	Name_English	Quantity
1	0102008016□	Bolt - M8*16	1
2	48R0210012/01□	Wheel cap	1
3	BC53AF04000	Polyurethane wheel	1
4	5310210010/02□	Gasket for wheel axle	1
5	BC45TG01000C2/49□	Right-front wheel bracket	1
6	0102008025□	Bolt - M8*25	2


7	Part7 Left-front wheel Spare Parts List		
Order	Part Number	Name_English	Quantity
1	0102008016□	Bolt - M8*16	1
2	48R0210012/01□	Wheel cap	1
3	BC53AF04000	Polyurethane wheel	1
4	5310210010/02□	Gasket for wheel axle	1
5	BC45TF02000C2/49	Left-front wheel bracket	1
6	0102008025□	Bolt - M8*25	2

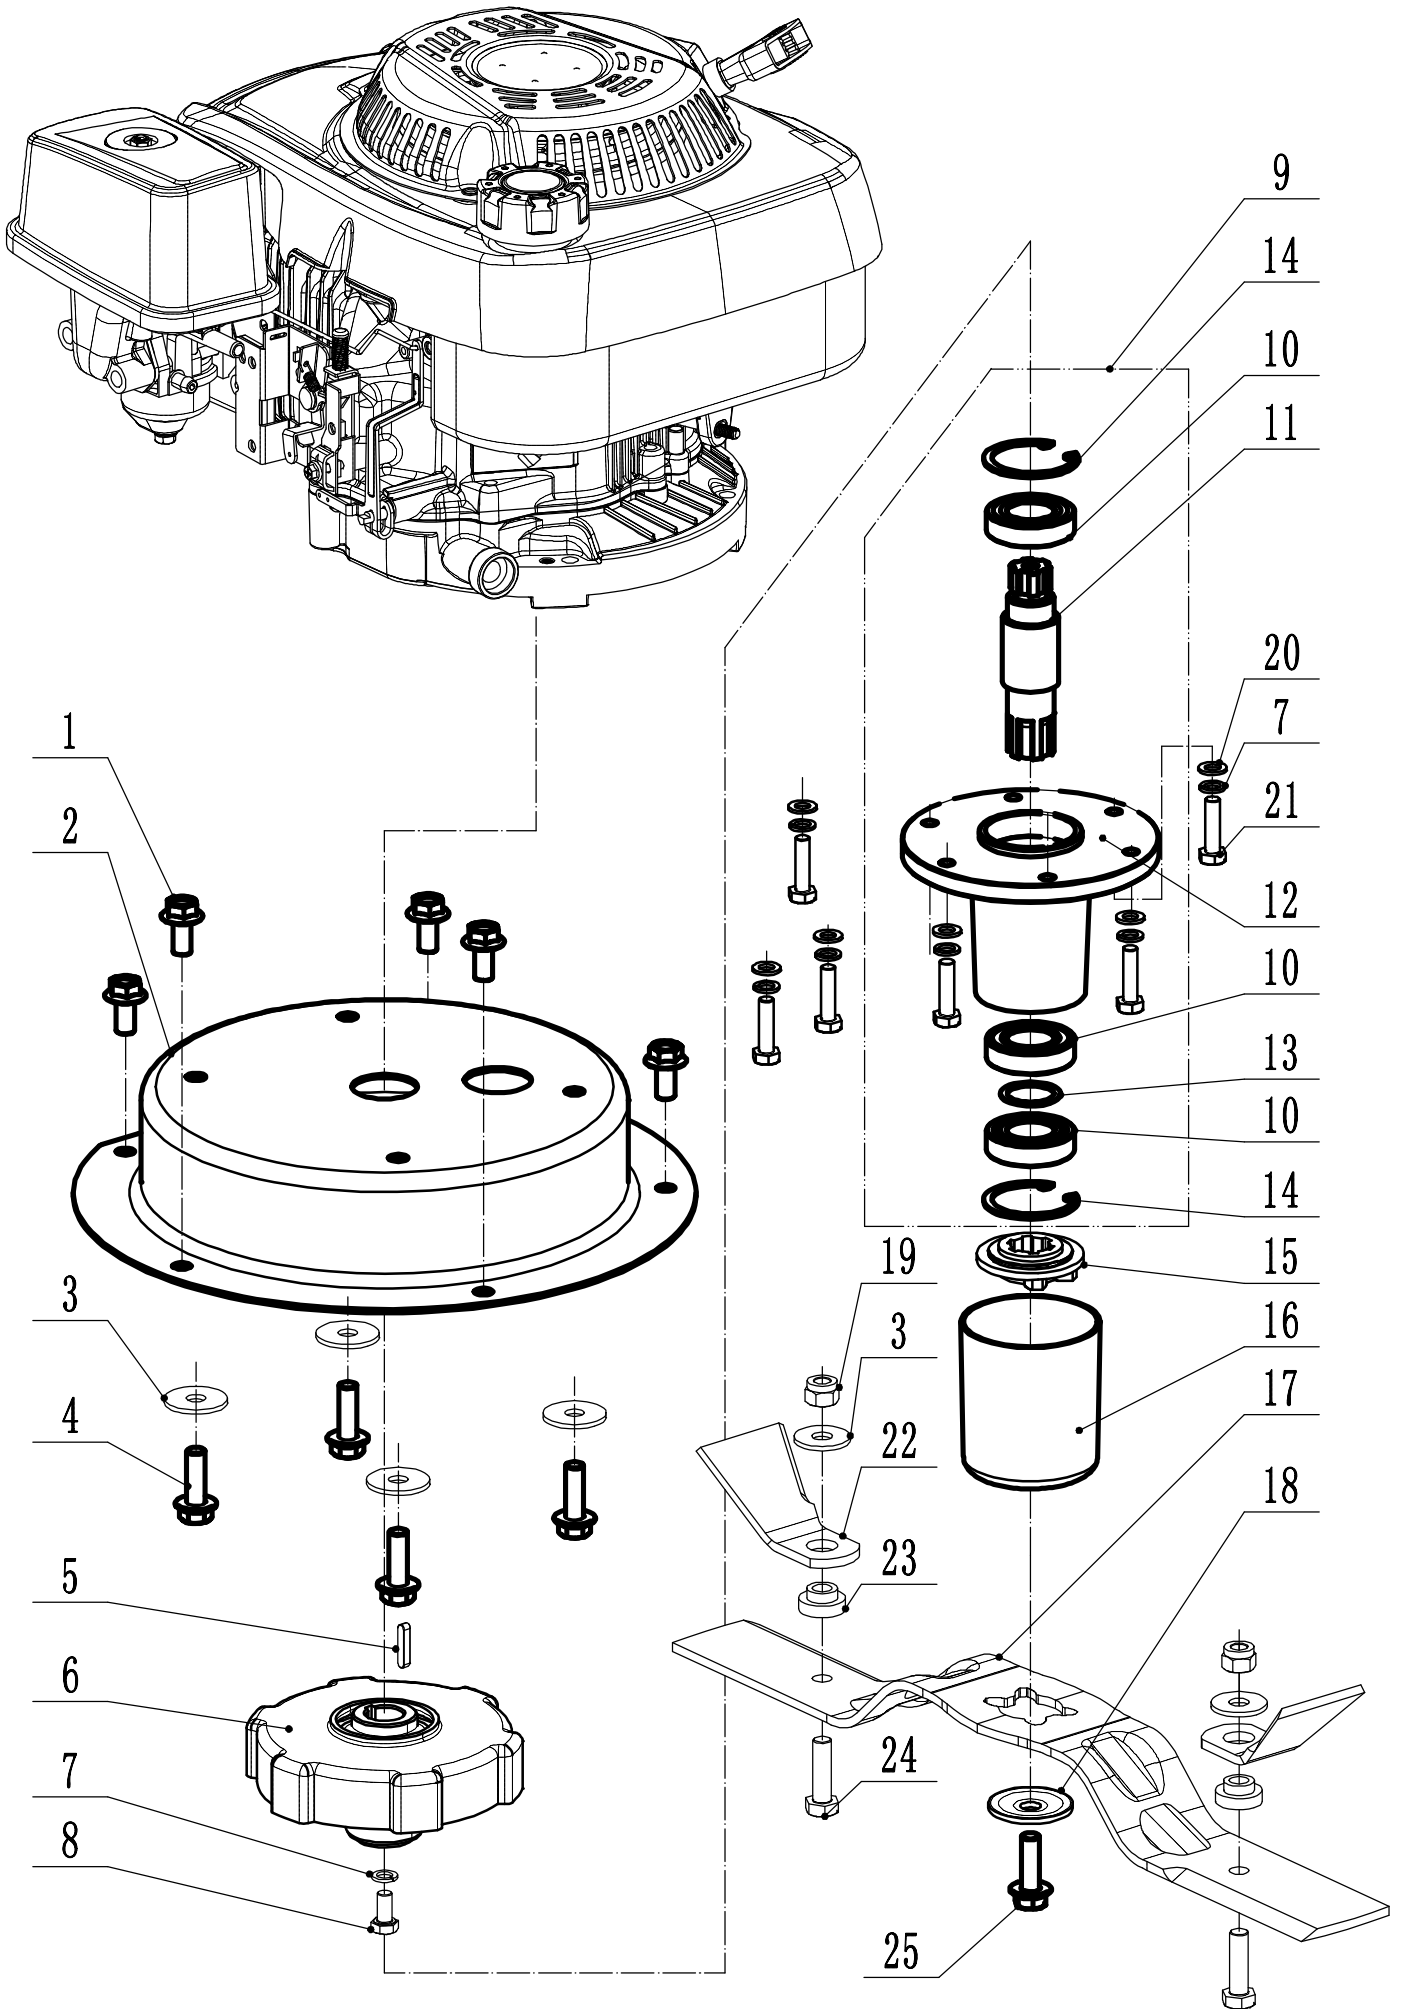


Model:WBBC537SCV
Service code: WBC537VC020B2211
Main body

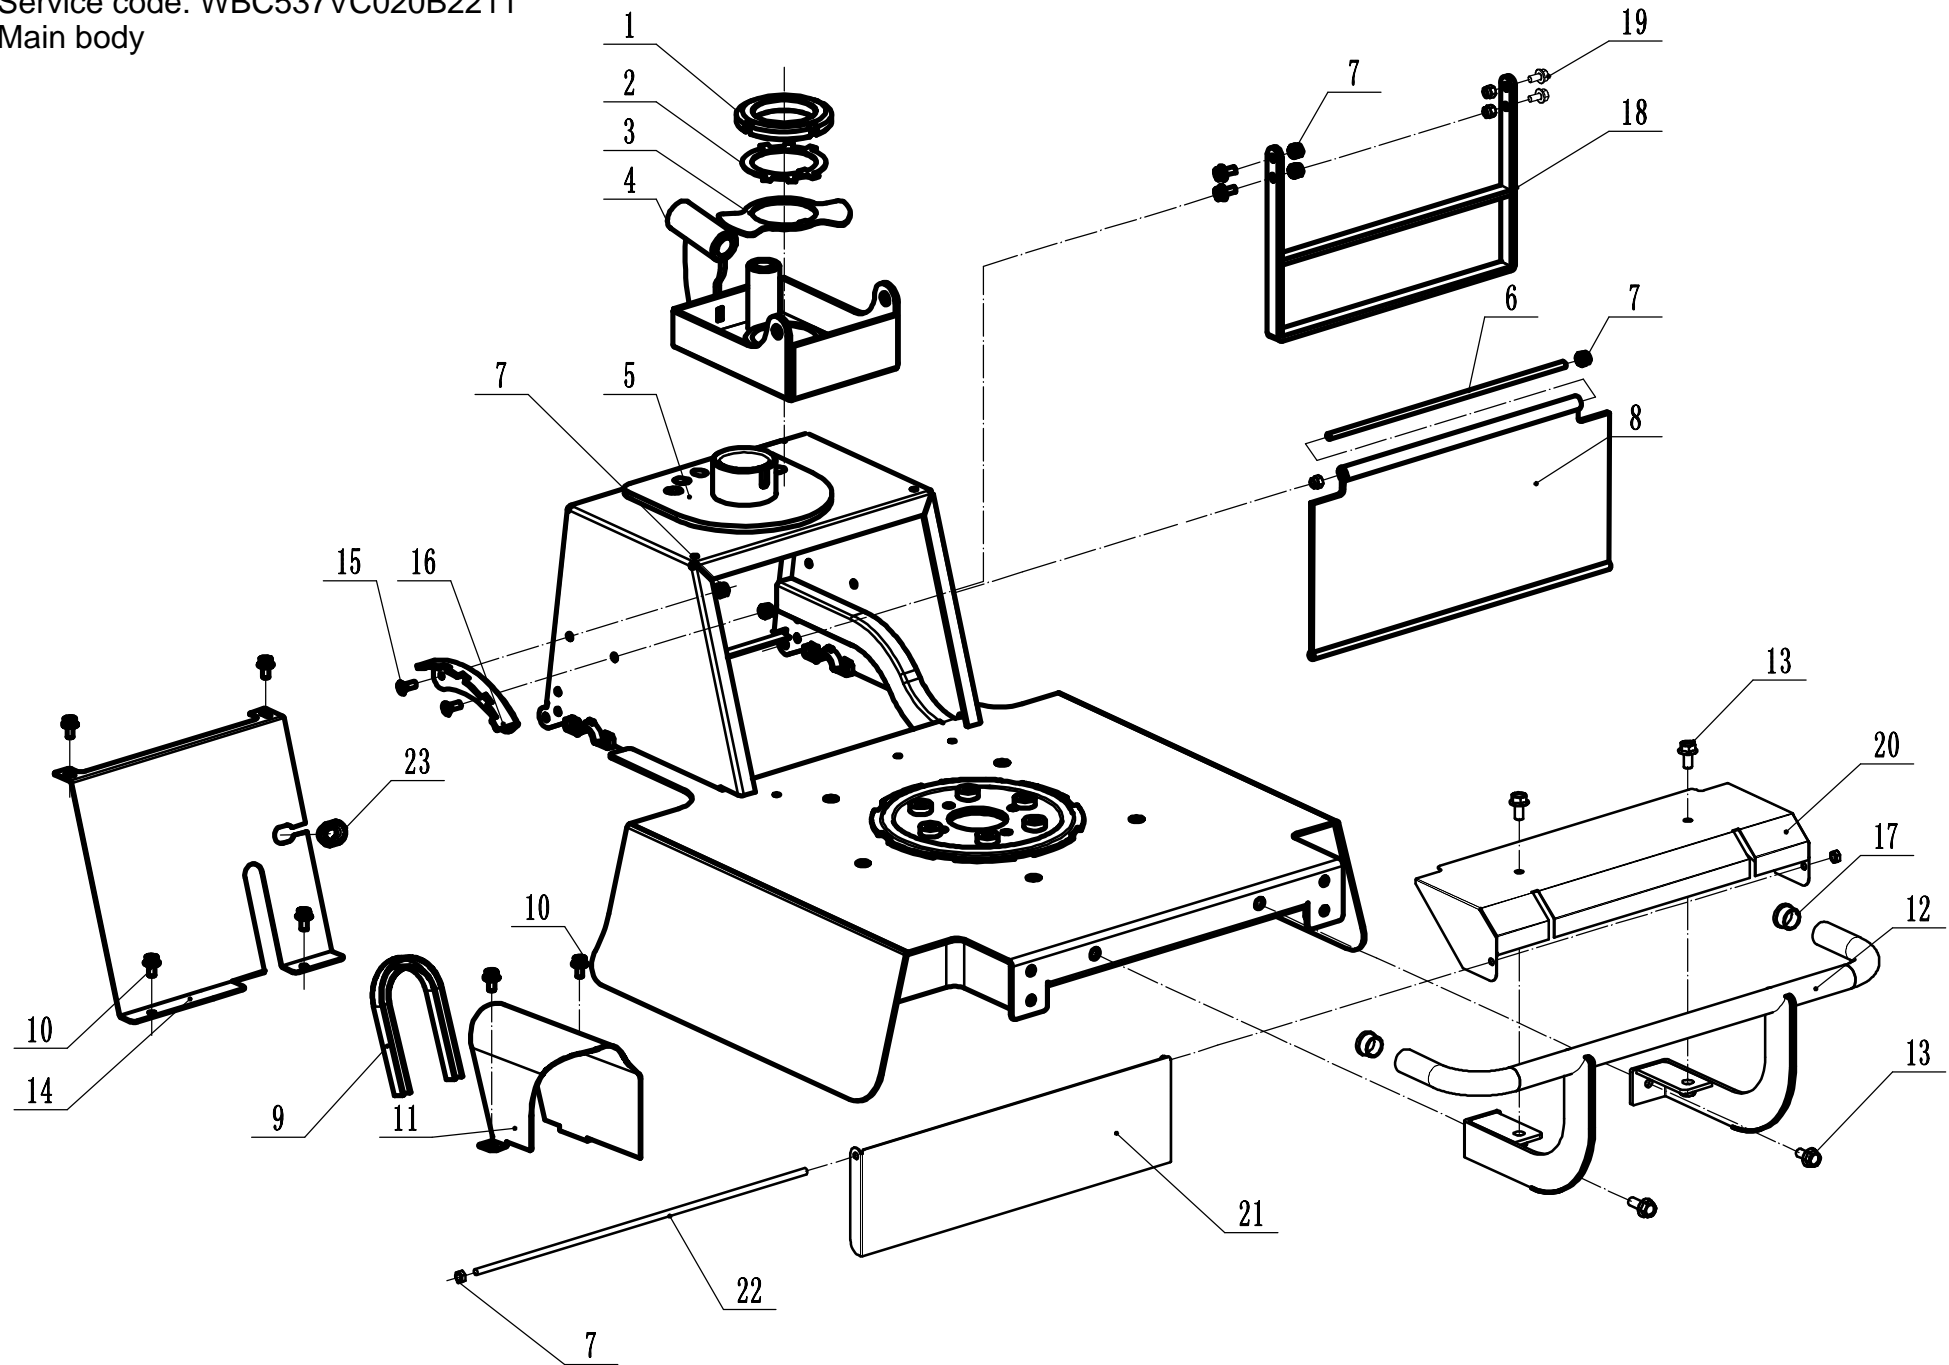


Model:WBBC537SCV
Service code: WBC537VC020B2211
Handle and controls

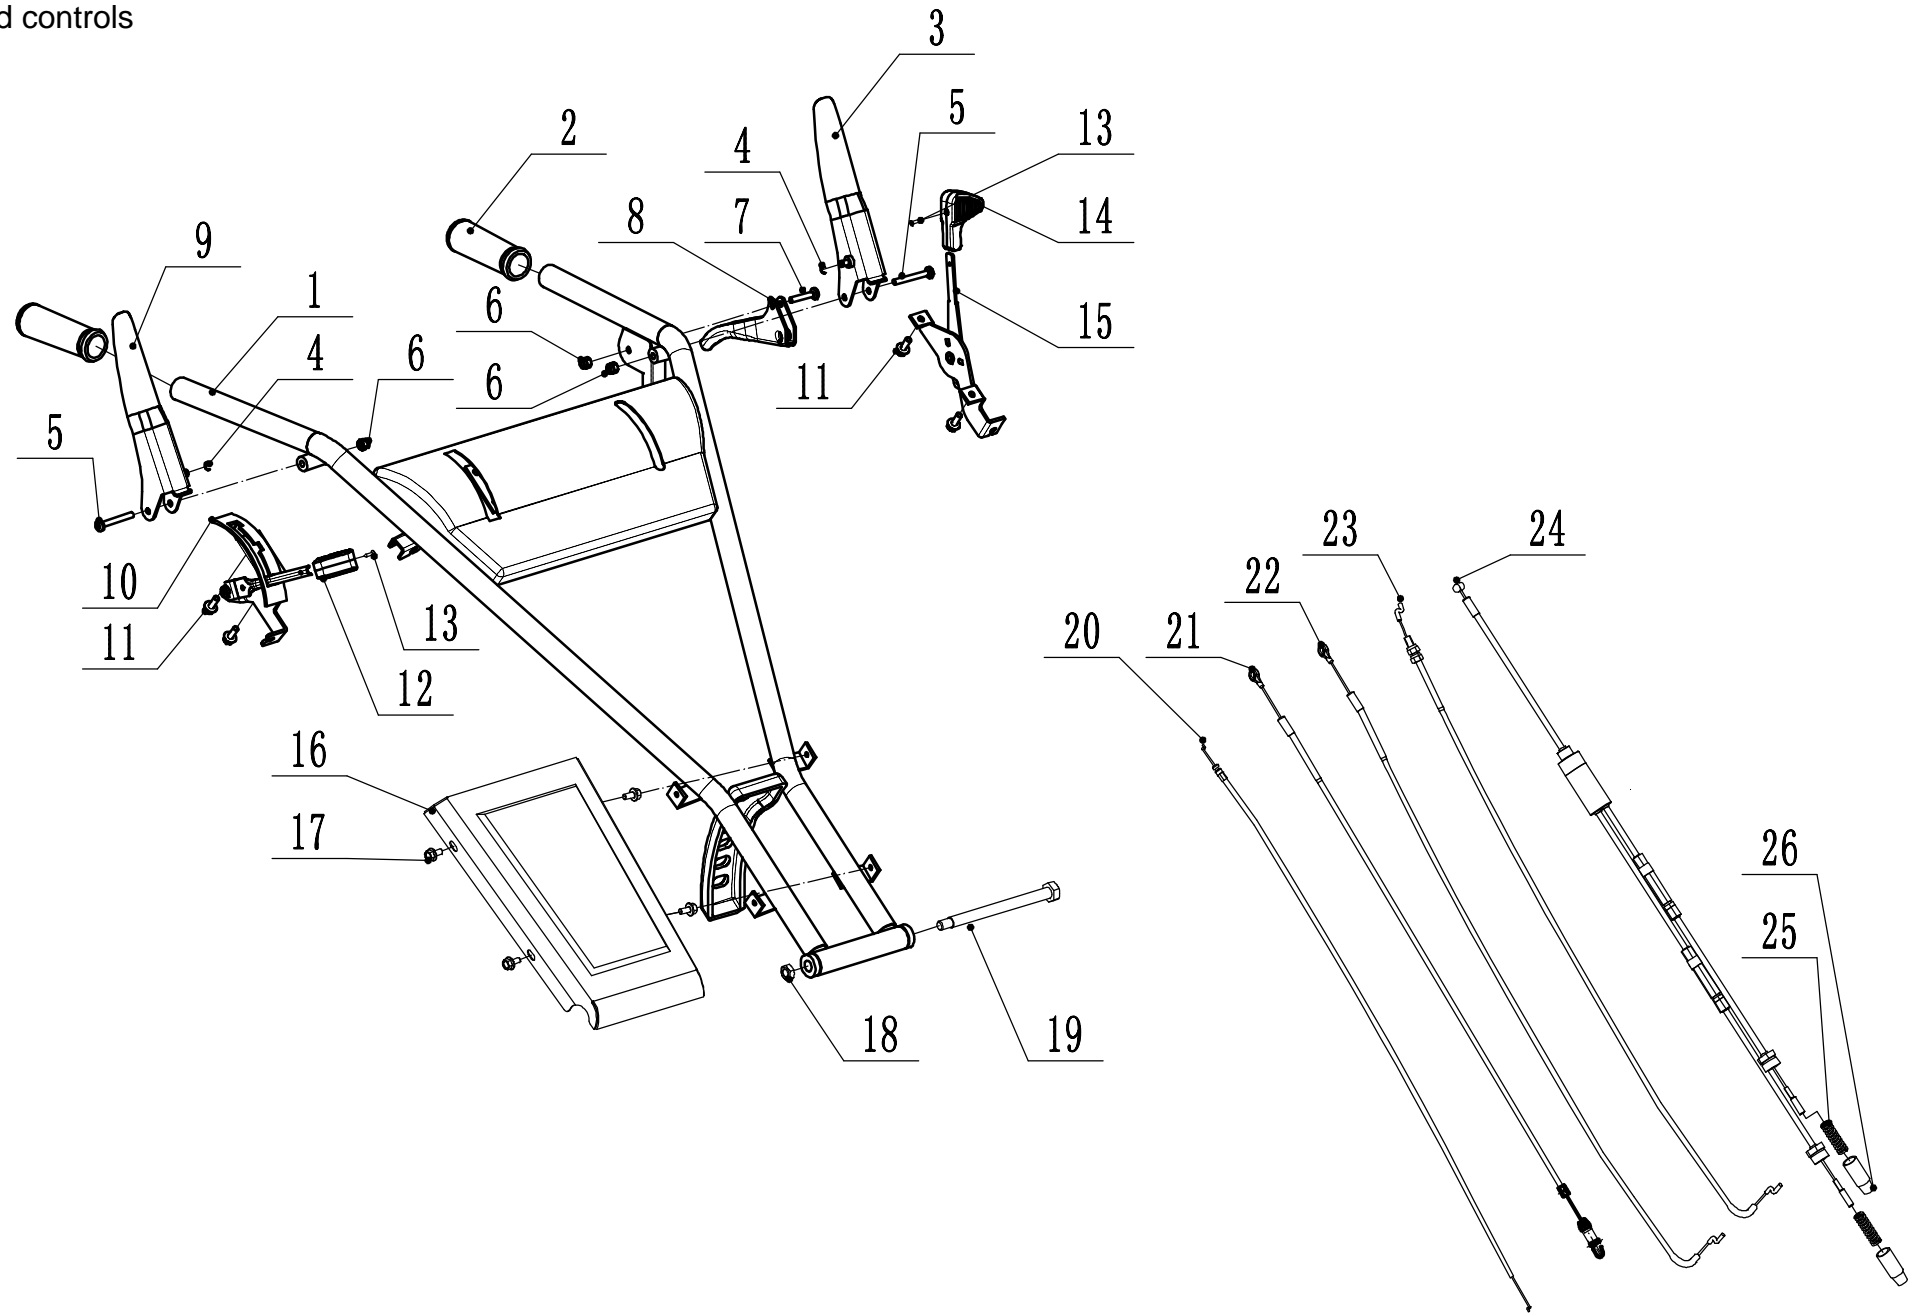

Model:WBBC537SCV
Service code: WBC537VC020B2211
Rear axle

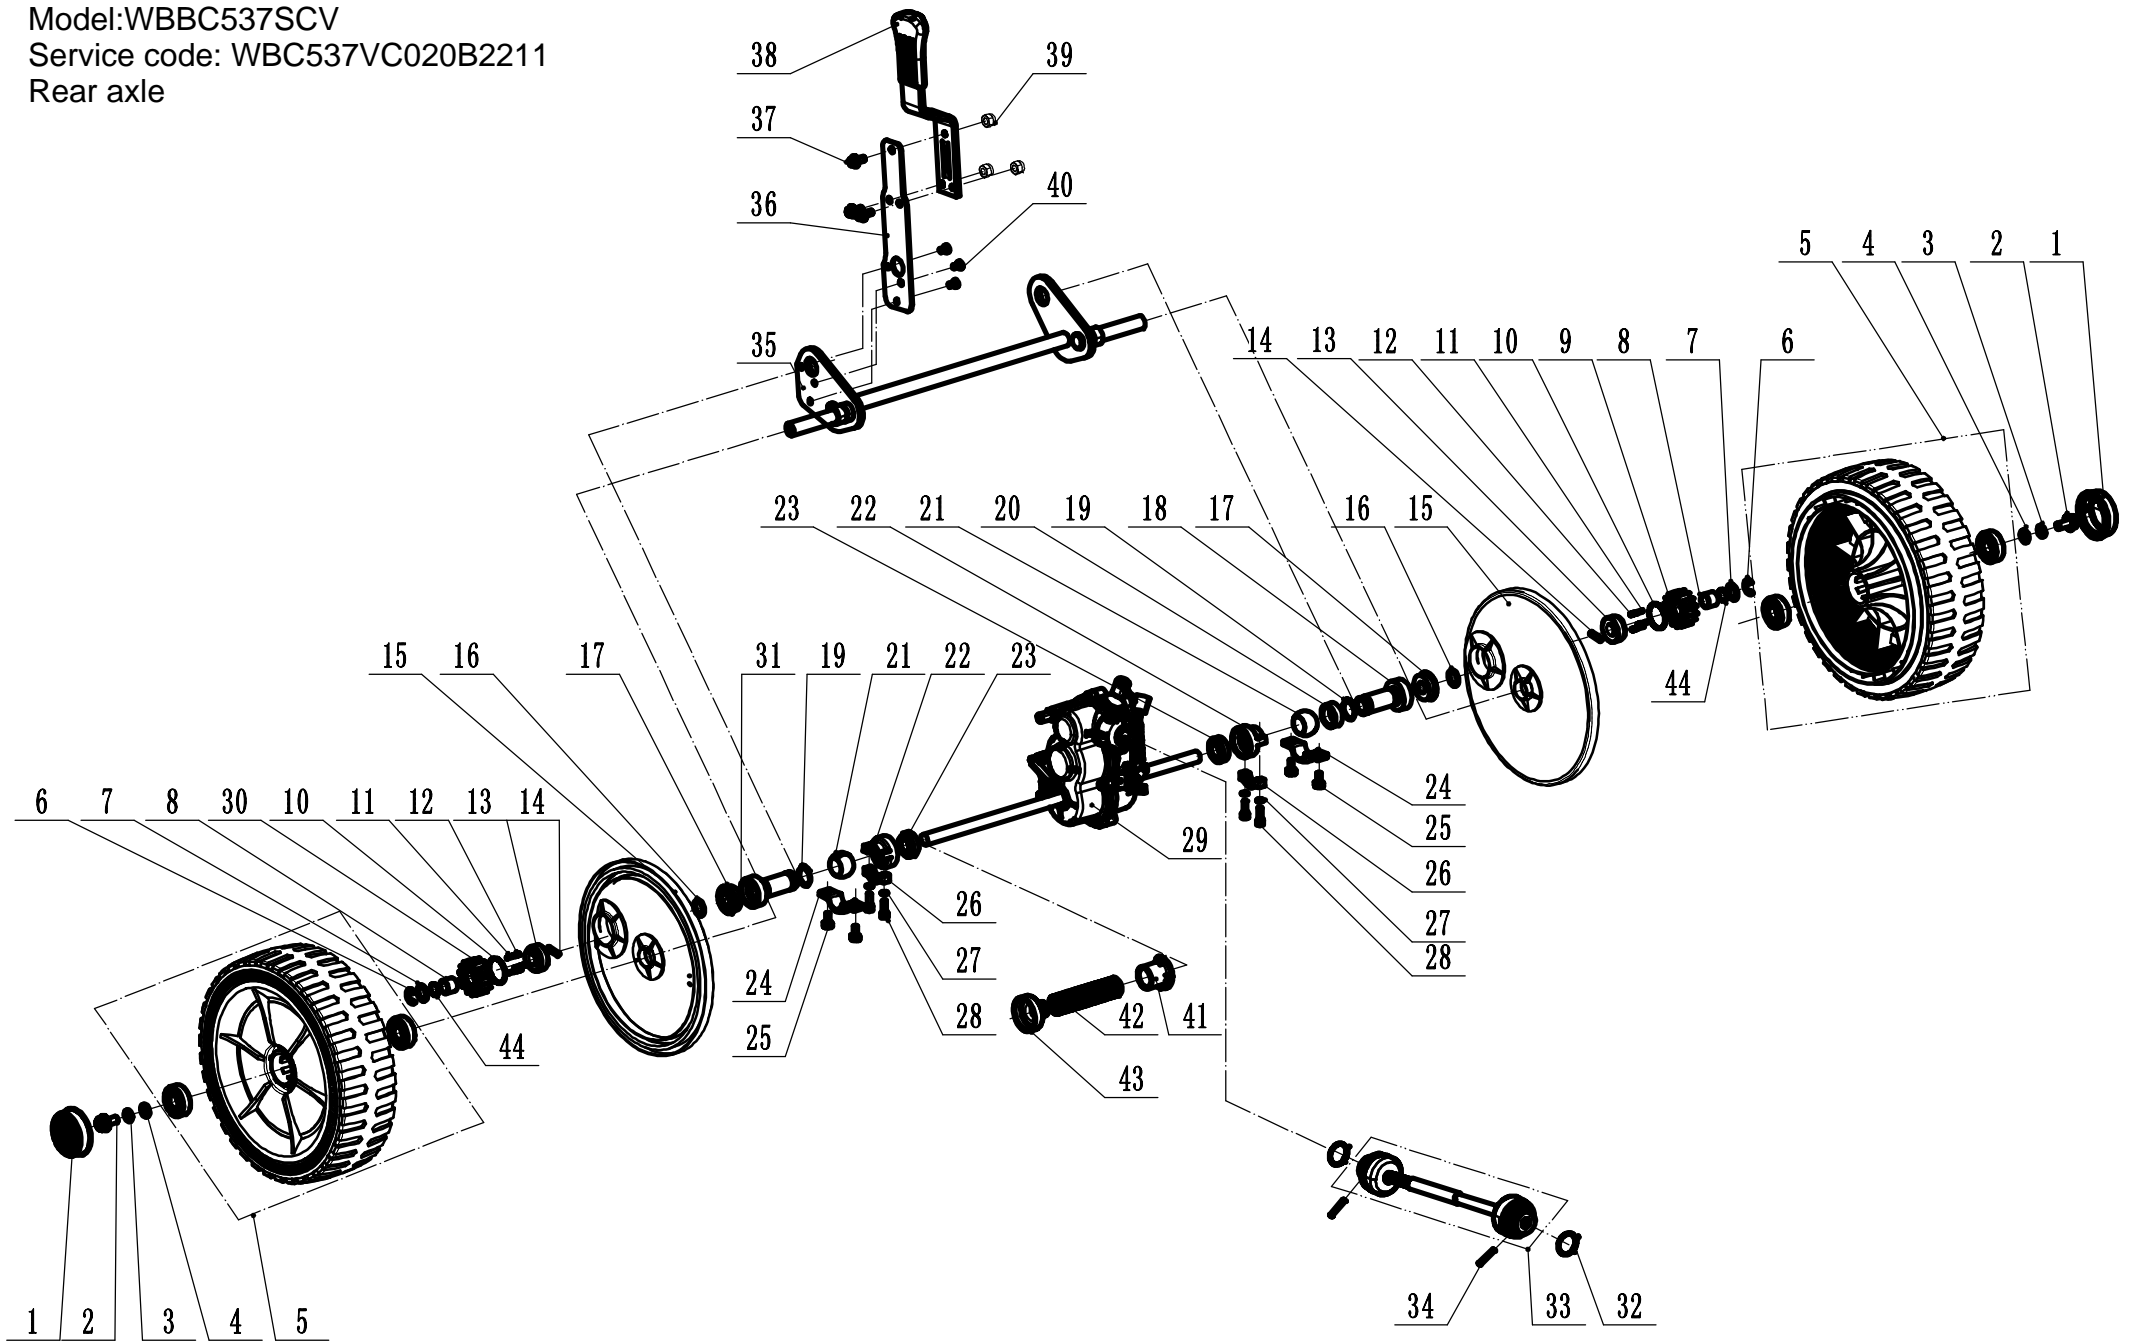

Model:WBBC537SCV
Service code: WBC537VC020B2211
Right-front wheel

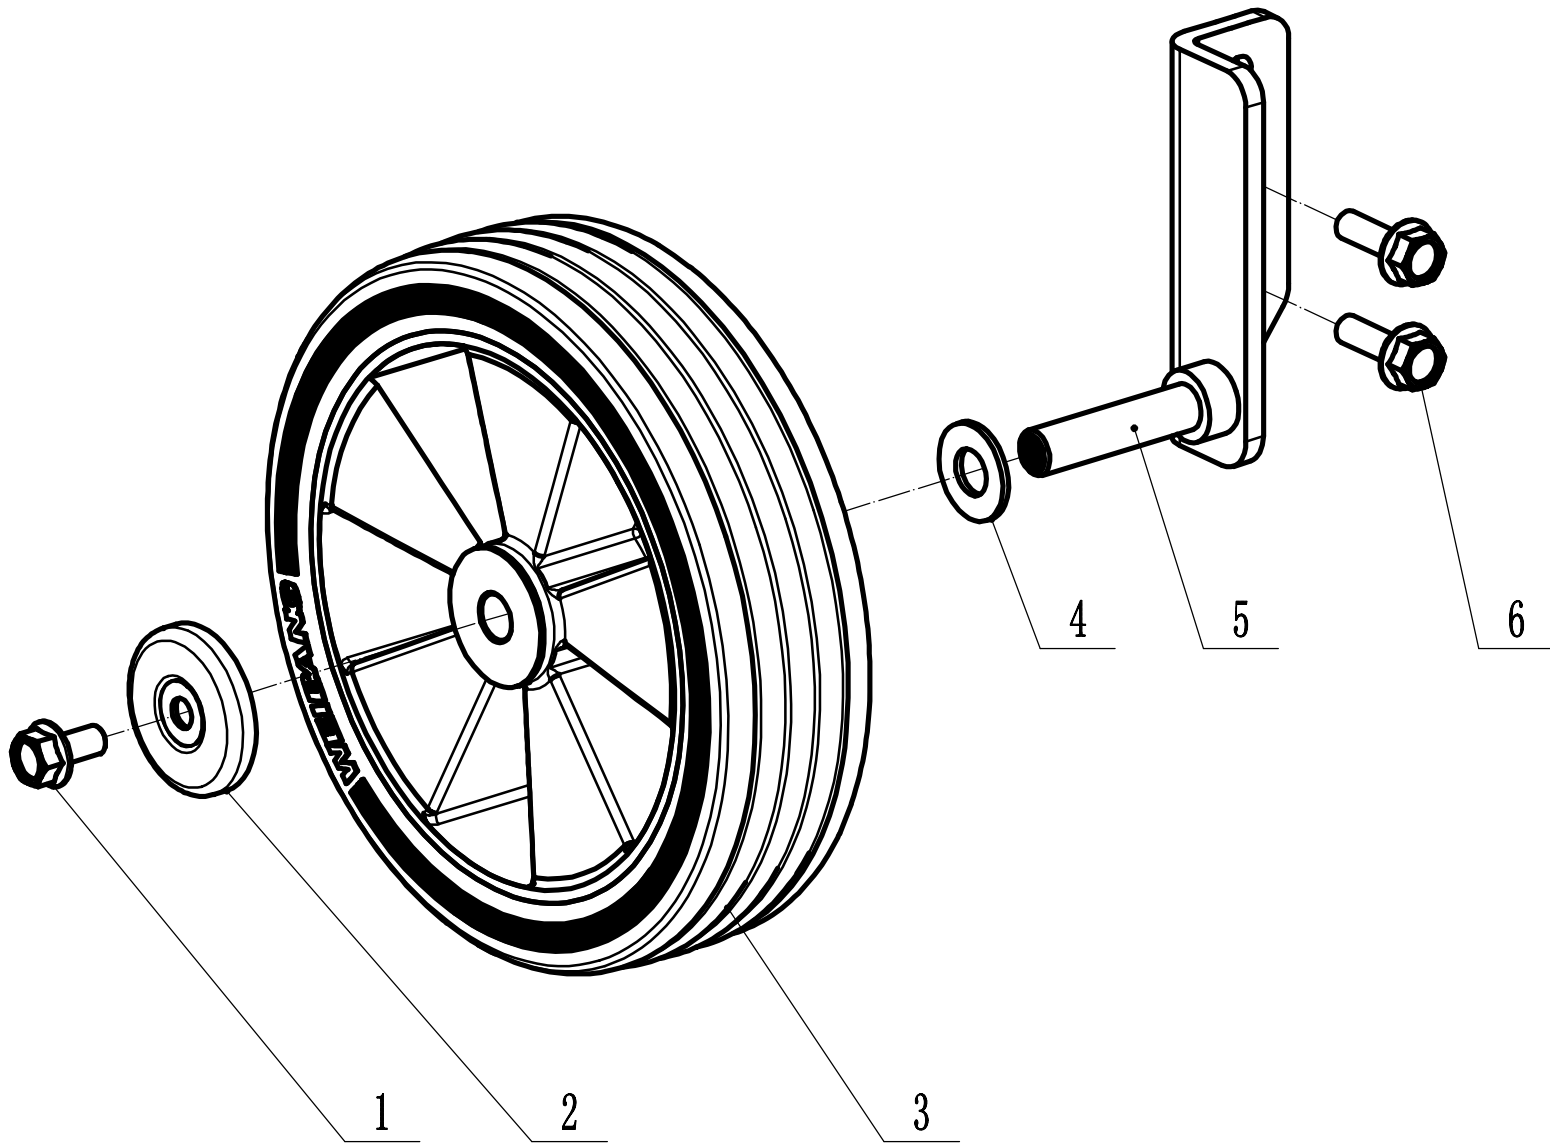

Model:WBBC537SCV
Service code: WBC537VC020B2211
Left-front wheel

